




WAGENINGEN
UNIVERSITY & RESEARCH

Constructing free water supply in barns with cemented troughs by a system of communicating vessels


Materials needed:

1. Plastic water pipes / hoses
2. Floater/shutter from a flushing toilet water reservoir
3. Used yellow cooking oil containers (cut off top)
4. Small material for waterproof connections


Present situation
(top view with app. measurements)

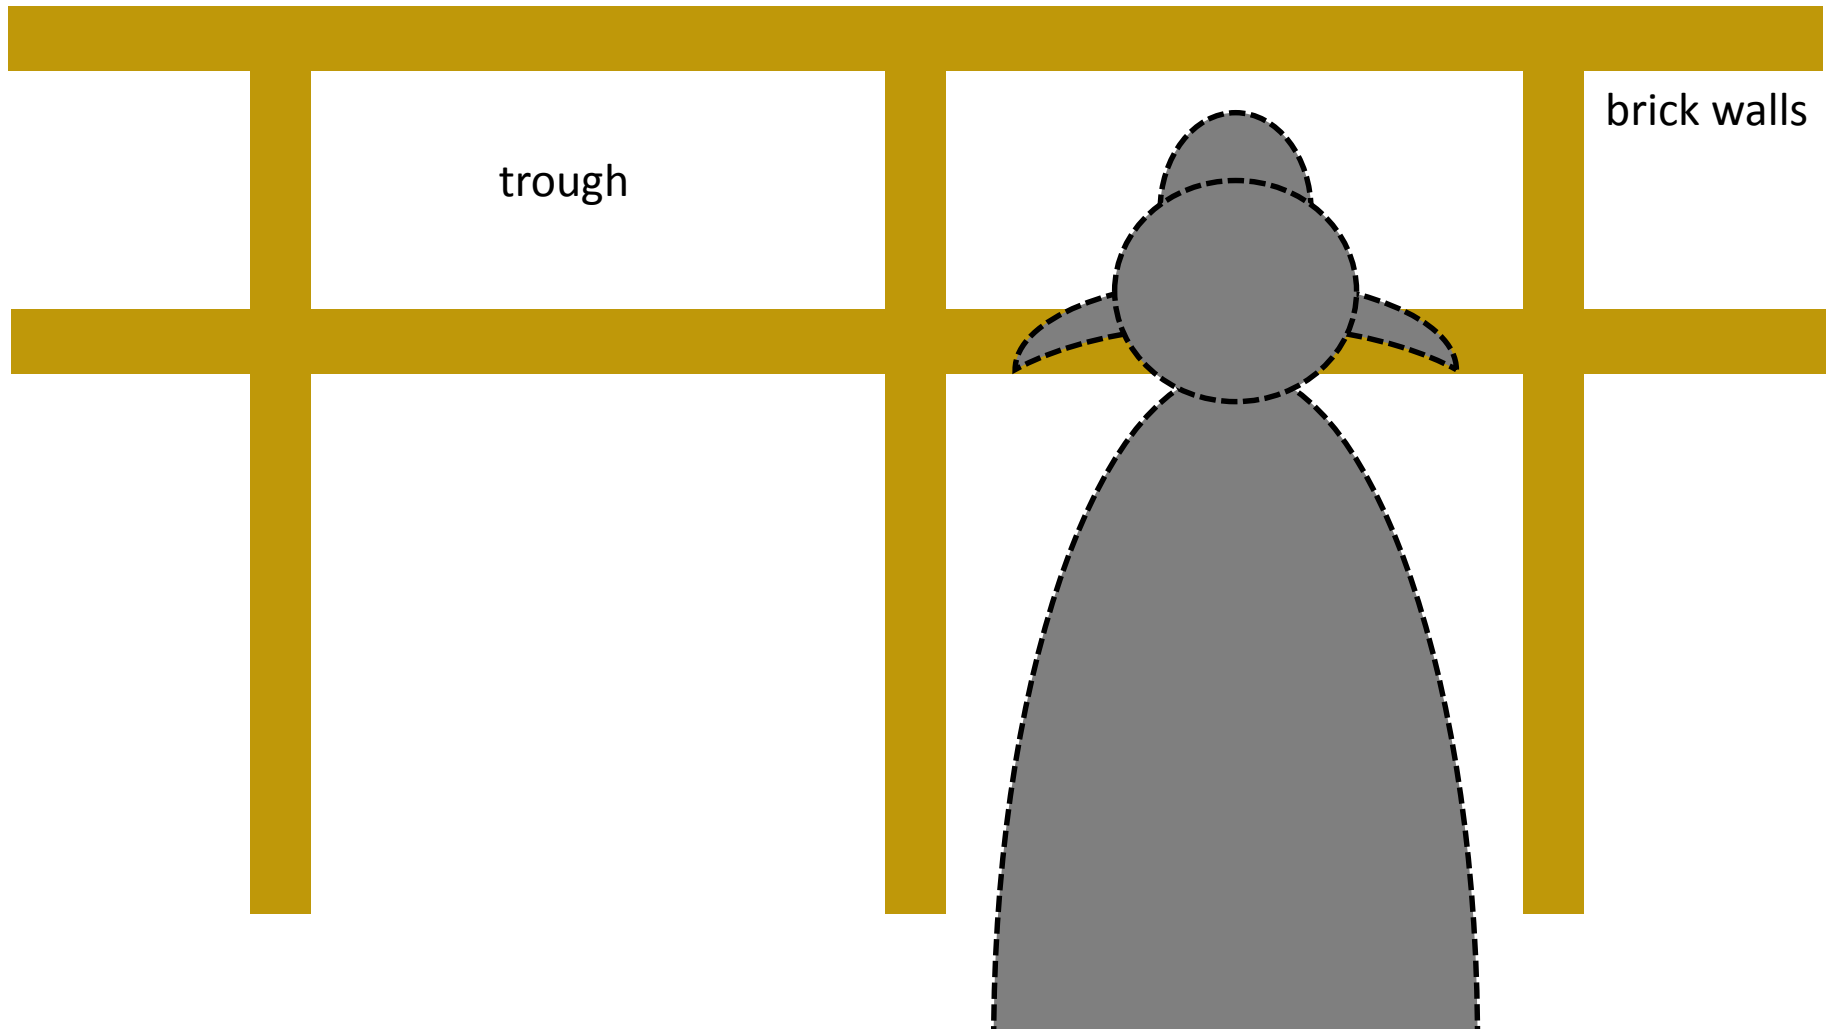


Proposed situation (1/2)
(top view with app. measurements)

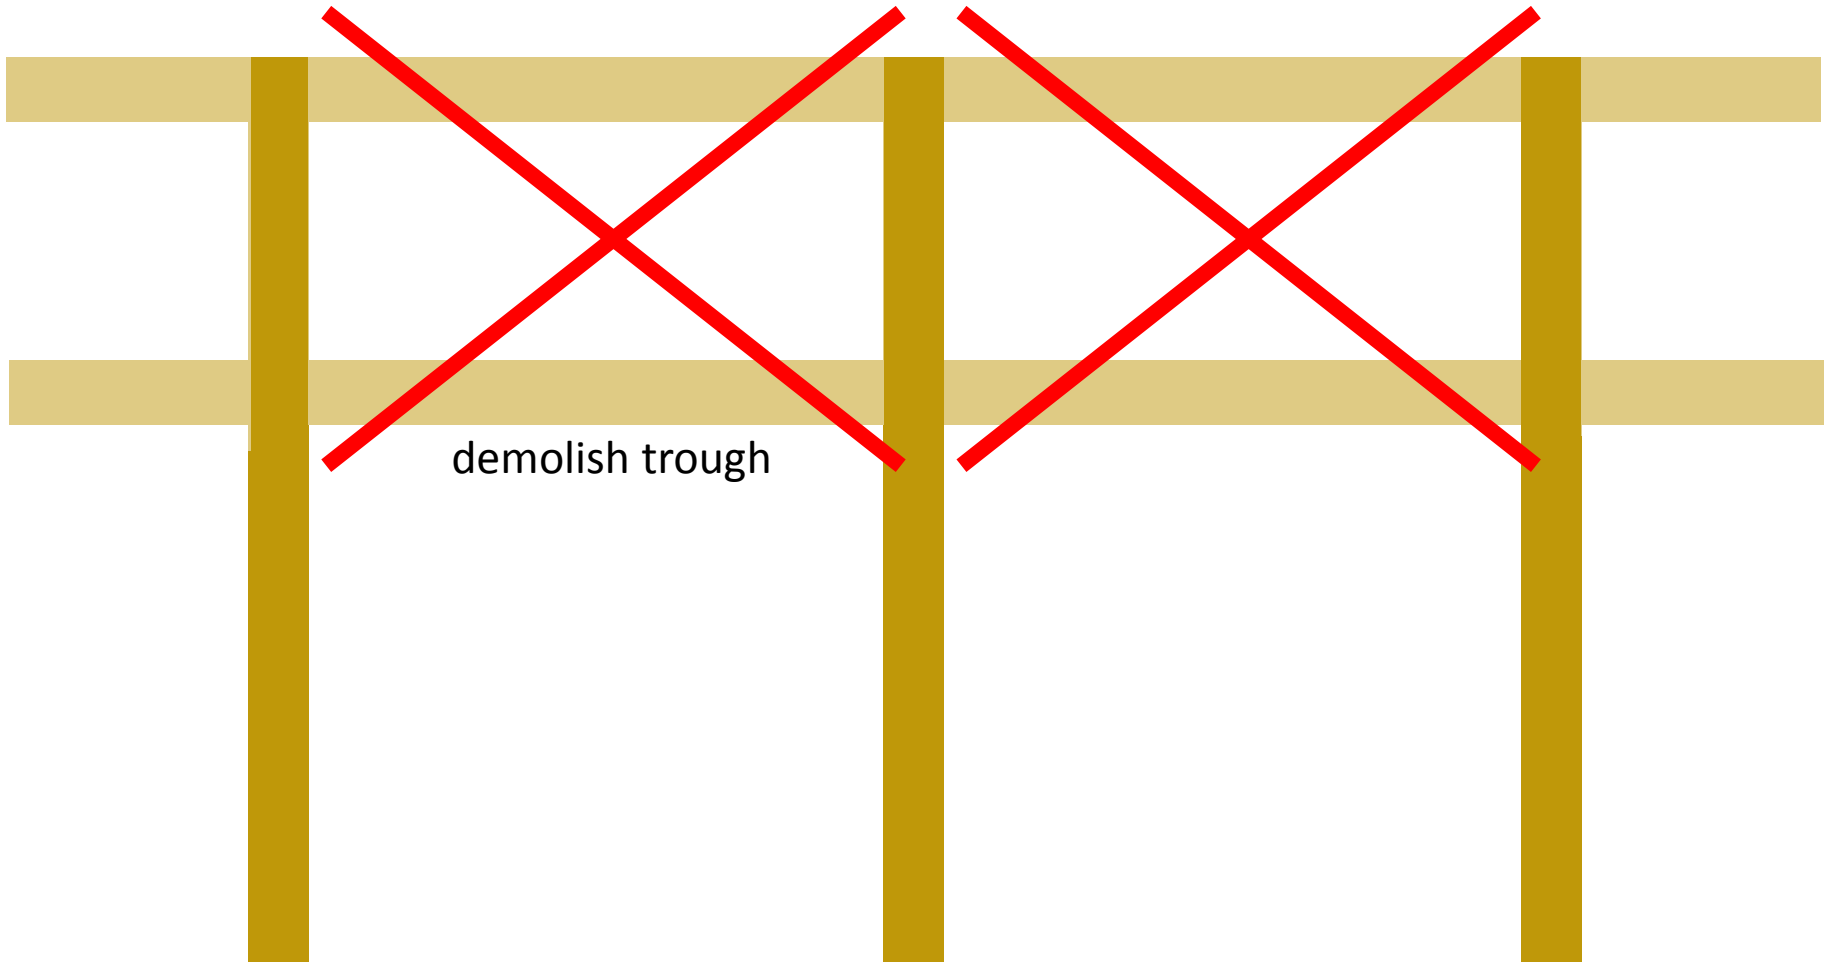


Proposed situation (2/2)
(top view with app. measurements)

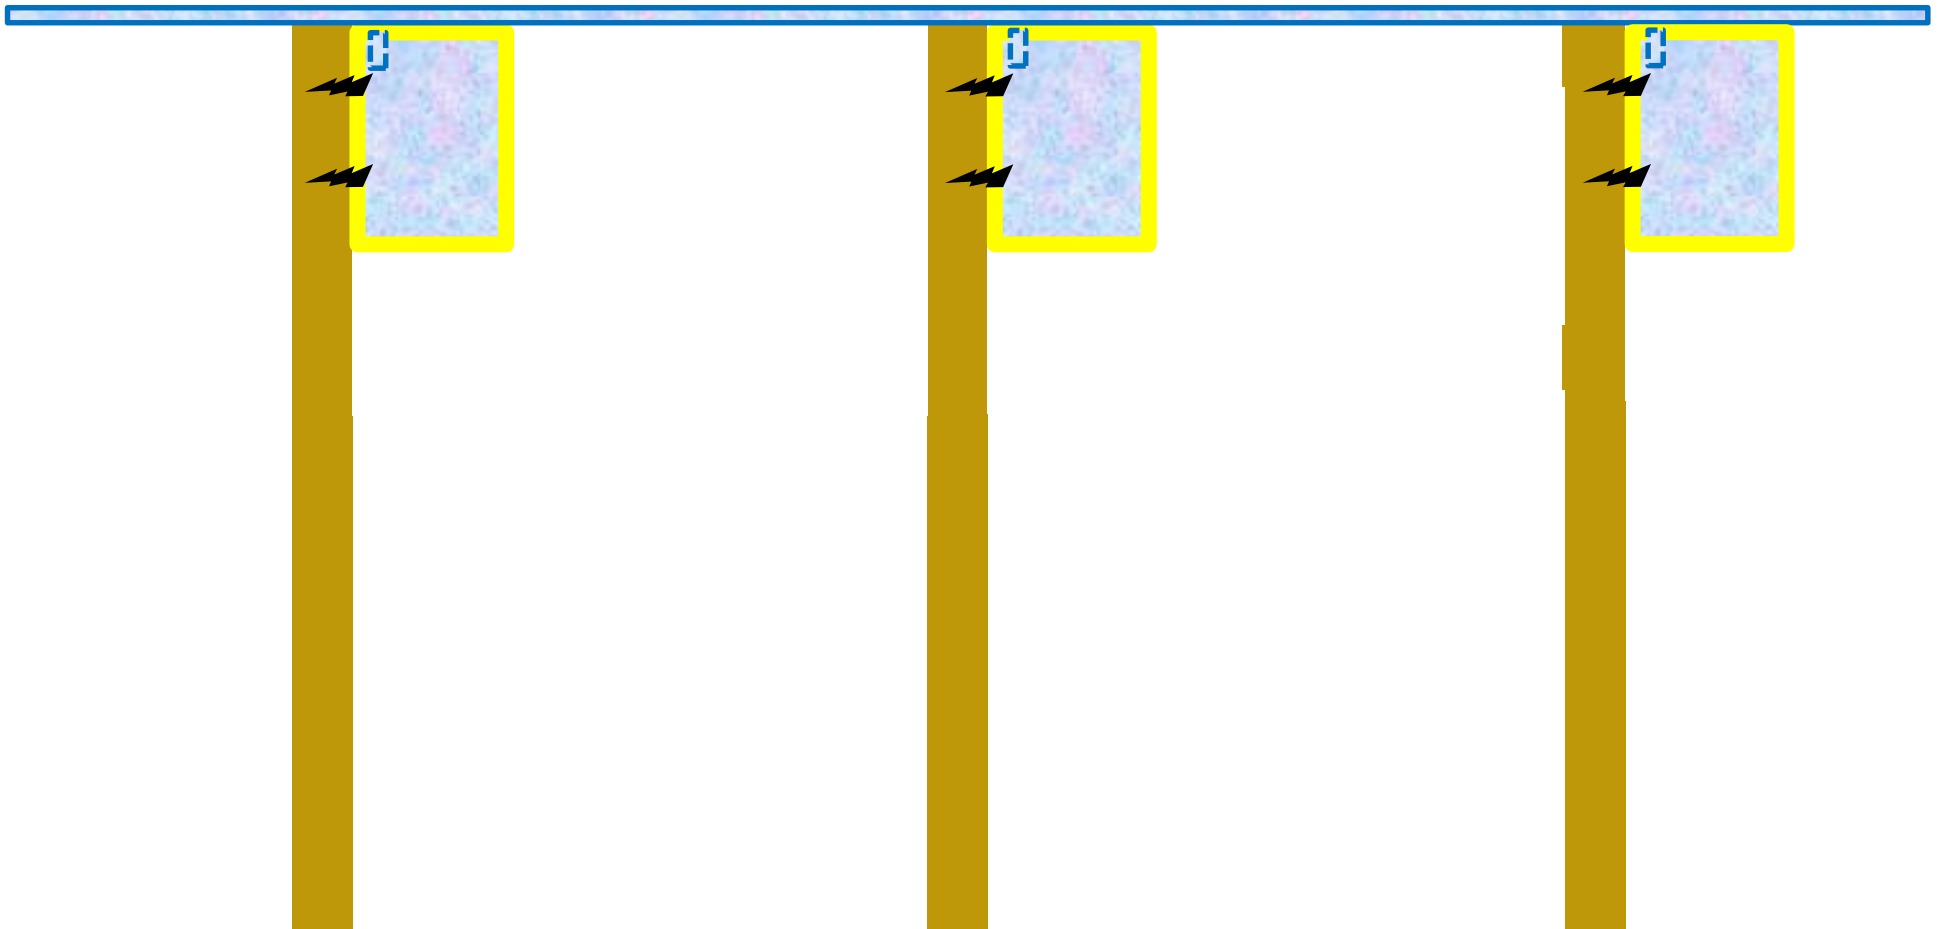


Proposed situation (1/2)
(front view with app. measurements)

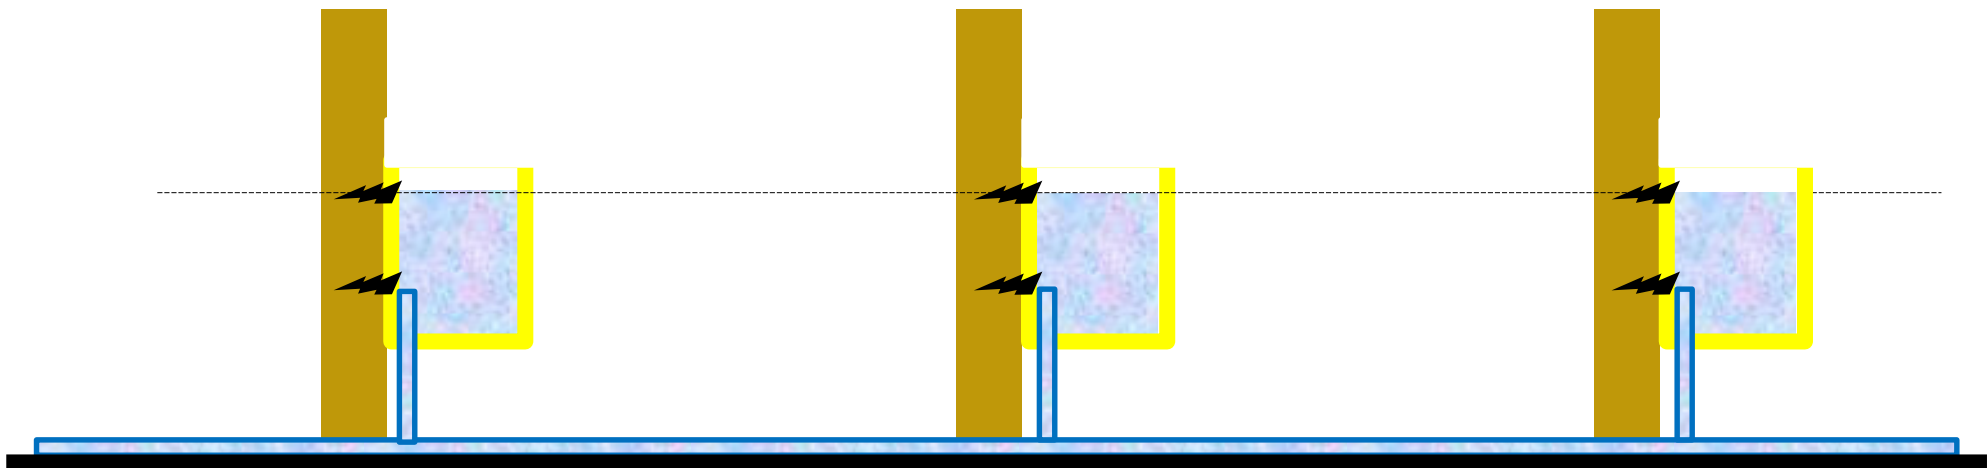


Proposed situation (2/2)
(front view with app. measurements)

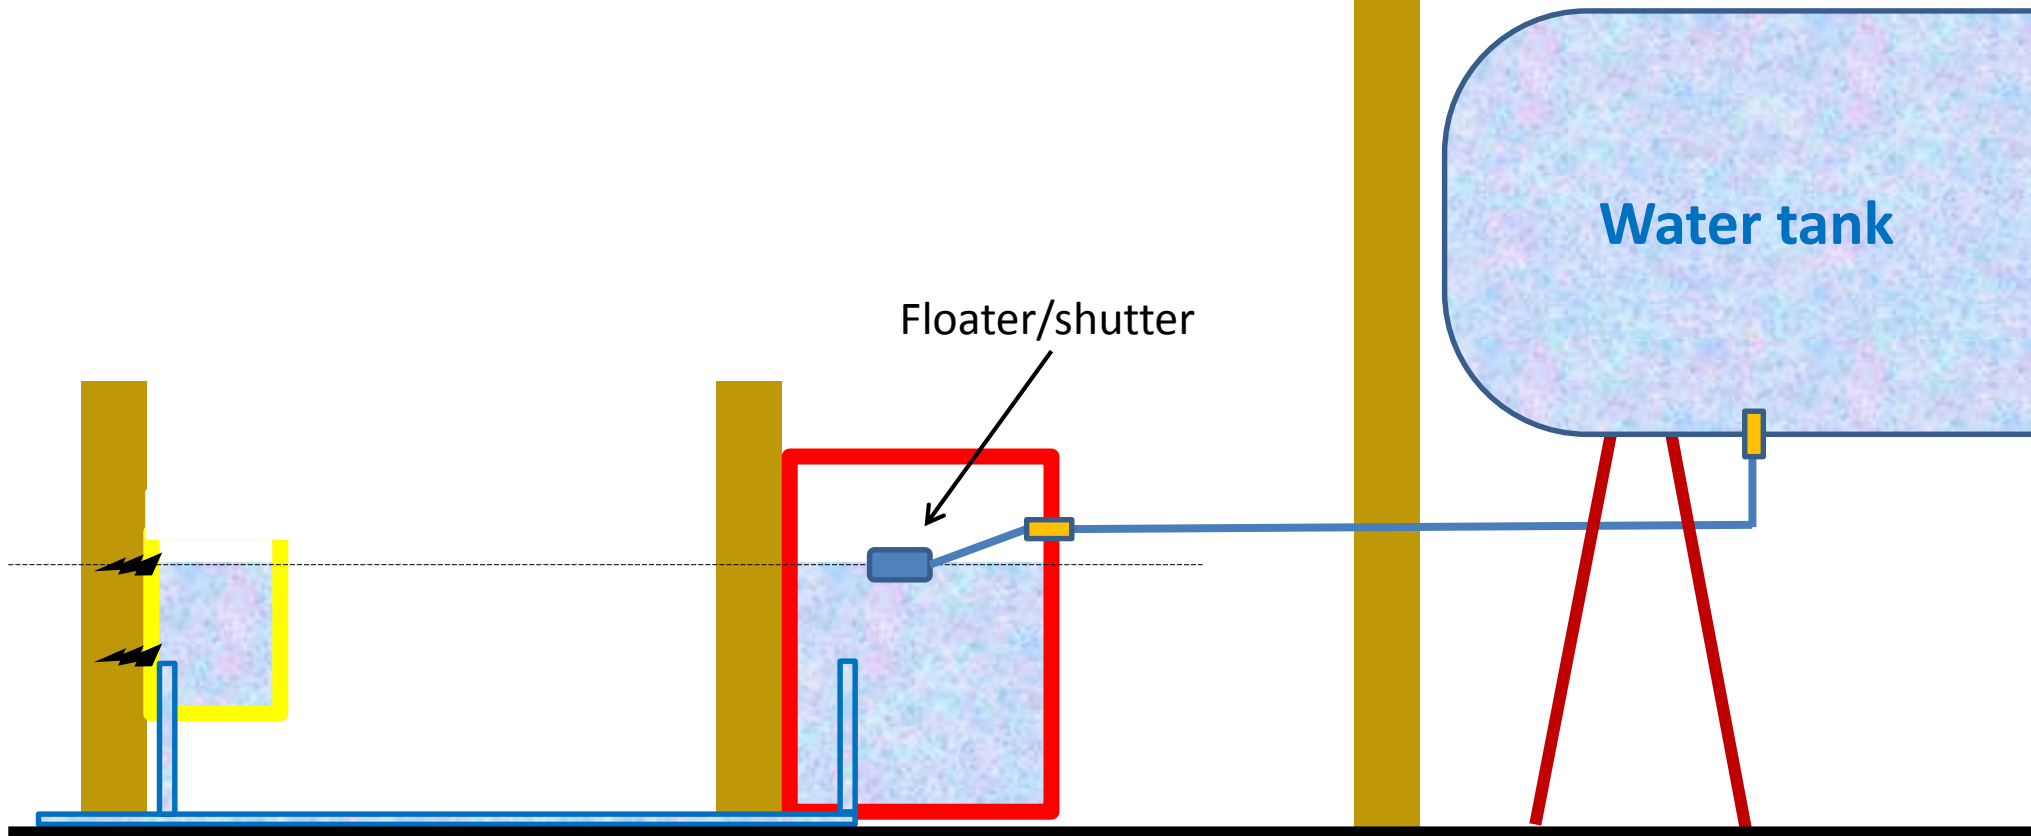

Proposed situation (alternative 1/2)
(top view with app. measurements)

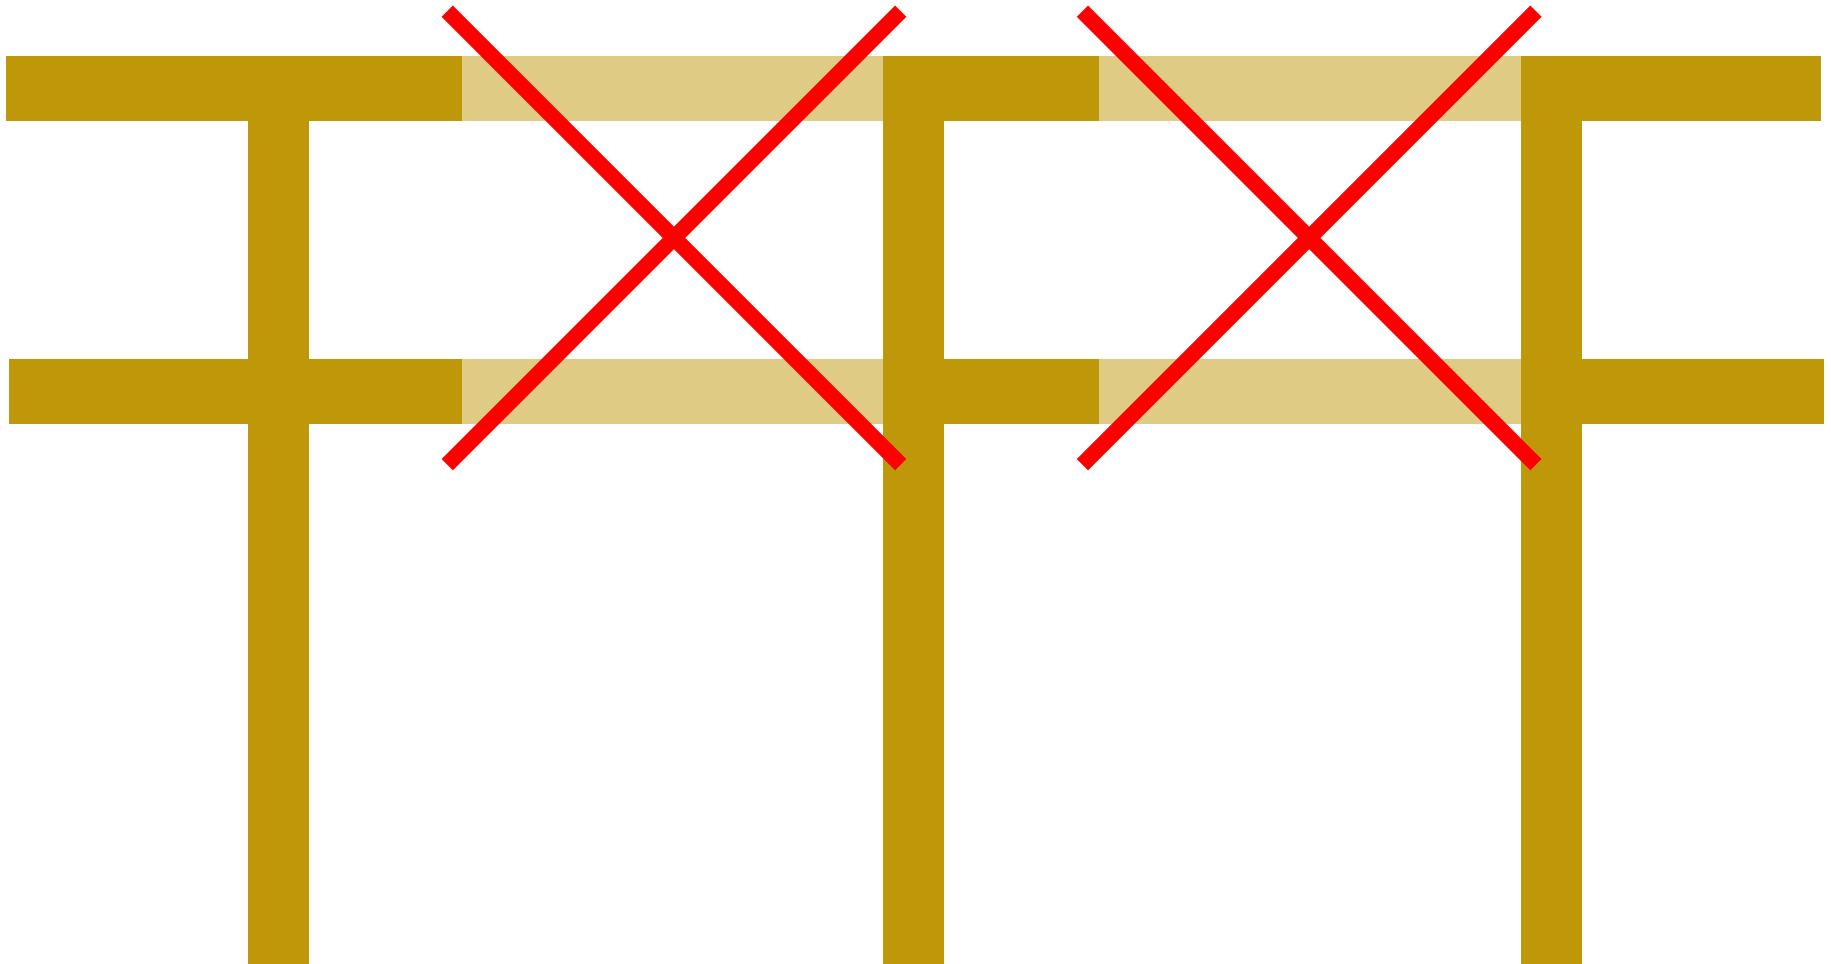

Proposed situation (alternative 2/2)
(top view with app. measurements)

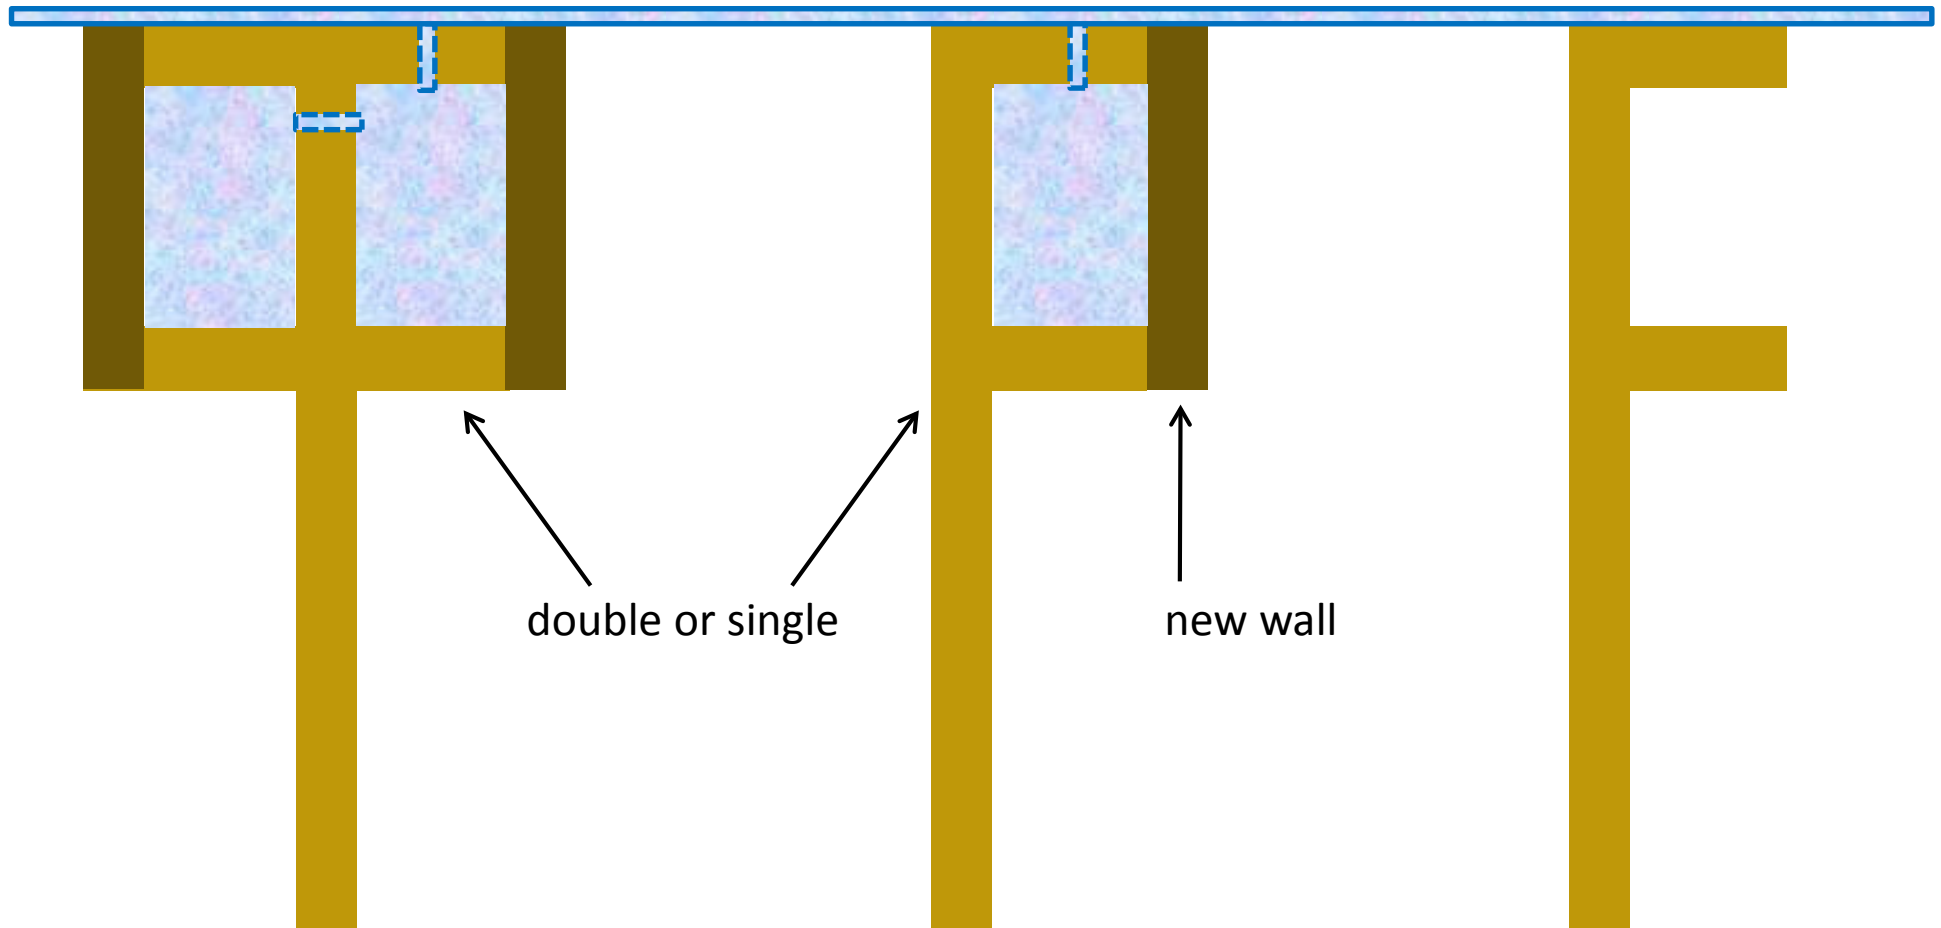

Proposed situation (alternative 1/1)
(front view with app. measurements)

